



FORD PROTECT<sup>®</sup>

# PremiumCARE

# 1000+

# Covered Components

(Partial List)

- Housing and Ins Assembly Transaxle
- Housing Assembly
- Housing Assembly - Rear Axle
- Housing Assembly Roof Slide
- Housing Cover - Gearshift
- Hub - Differential Gear Clutch
- Hub - Direct Clutch
- Hub - Intermediate Clutch
- Hub - Synchronizer
- Hub - Transmission Output Shaft
- Hub /Knuckle Assembly
- Hub Assembly - Clutch Release
- Hub Crankshaft Pulley
- Hub Synchronizer
- Hybrid Battery Cooler Assembly
- Hybrid Battery Fan
- Hybrid Battery Fan Motor
- Hybrid DC-to-DC Converter
- Hybrid High-Voltage Disconnect
- Hybrid Information Display
- Hybrid Traction/Electric Motor
- Hydraulic Actuator Assembly
- Hydraulic Piston
- Idler Assembly - Timing Belt
- Ignition Cylinder Lock
- Impeller - Water Pump
- Indicator - Rear Bracket
- Indicator Assembly - Oil Level
- Indicator Assembly - Radio Receiver Control
- Indicator Control Selector
- Inertia Switch
- Inflatable Safety Belts
- Insert - Oil Pump Drive Gear
- Insert - Synchronizer Hub
- Insulator - Alternator
- Insulator - Front Radius Arm
- Insulator - Front Spring
- Insulator - Rear Axle Differential
- Insulator - Rear Spring
- Insulator A/C Cond
- Insulator EGR Tube
- Insulator Front Spring
- Insulator Rear Spring
- Insulator Stabilizer Assembly
- Insulator Steering Gear
- Insulator/Mount - Engine Block
- Intake Manifold Run
- Intake Manifold Support
- Inter Clutch Cylinder Assembly
- Intercooler
- Interior/Exterior Door Handle/Lever
- Intermediate Clutch - Piston Seal
- Internal Separator Plate
- Inverter System Controller (ISC) (Hybrid)
- Joint Assembly - Front Suspension
- Joint Assembly - Front Suspension Lower
- Joint Assembly - Rear Axle Shaft
- Joint Assembly - Rear Suspension Lower
- Joint Assembly - Shifter Rod Front
- Knock Sensor
- Knuckle Assembly - Universal Joint
- Knuckle - Front Wheel
- Knuckle - Rear Wheel
- Lamp - Interior Pillar\*
- Lamp Assembly - Transmission Control
- Lamp Output Module
- Lane Depart Warning System
- Latch - Front/Rear Door
- Latch Front/Rear Seat Back
- Latch Rear Seat
- Latch Rear Seat Cushion
- LED (Light-Emitting Diode) Lighting - Factory-Installed\*
- Level Reverse Gear Shift
- Lever - Brake Shoe Adjuster
- Lever - Parking Brake
- Lever - Power Diff
- Lever Assembly - Down Shift
- Lever Assembly - Elect Shift
- Lever Brake Shoe Adjuster
- Lever Lumbar Support
- Lever Transfer Case Control
- Lift Assembly Hood
- Link Assembly - Stabilizer Bar
- Linkage and Bushings
- Load Leveler Suspension System
- Lock Assembly - Steering
- Lock Assembly Rear Seat Back
- Locking Hub Assembly
- Lockout Hub Actuator Cam
- Lockout Hub Plate
- Logic Module Brake - Master Cylinder
- Lower Ball Joint - Front Axle
- Lower Piston Seal
- MacPherson Style Strut Front
- MacPherson Style Strut Rear
- Magnet Case Ceramic
- Main Bearing Thrust Washer
- Manifold - Vacuum Outlet
- Manifold Absolute Pressure Sensor
- Manifold and Thermostat
- Manifold and Tube Assembly
- Manifold and Valve Assembly
- Manifold Assembly - Fuel Supply
- Mass Air Flow Sensor
- Mass Air Flow/Intake Air Temp Sensor
- Master Assembly - Parking Brake Control
- Master Cylinder
- Master Cylinder Assembly
- Master Cylinder Spring
- Metering Valve Assembly
- Microphone Assembly
- Mobile Phone Control Assembly
- Module - Brake Anti-Lock
- Module - Engine Control Relay
- Module - Fuel Pump Driver
- Module - Glow Plug Control
- Module - Parking Aid Control
- Module - Passive Restraint
- Module - Water Detection
- Module and Control Assembly
- Brake Anti-Lock
- Module Assembly - Aux Controls
- Module Assembly - Ignition Lighting - Factory-Installed\*
- Multi-Function
- Module Assembly - Transmission Case
- Module Instrument Cluster
- Motor - Adjustable Pedal
- Motor and Drive Assembly
- Motor Assembly - Blower Alternator
- Motor Assembly - Elect Shift
- Motor Assembly - Steering Column Release
- Motor Assembly - Vacuum Controller
- Multispeed - Wiper Motor
- Navigation Antenna
- Noise Insulator
- Pipe Brake Anti-lock
- Piston - Driveshaft Accumulator
- Piston - Low Servo
- Piston - Transmission Reverse
- Piston and Connecting Rod Assembly
- Piston Assembly - Brake Cylinder
- Piston Assembly - Transmission Reverse Clutch
- Piston Pin - Front Band
- Piston Ring
- Oil Cooler Transmission
- Oil Level Sensor
- Oil Pan
- Oil Pressure Sender
- Oil Pump
- Oil Pump Gear
- Oil Pump Housing
- Oil Seal - Output Seal
- Oil Seals - All Internal and External
- Oil Selector Main Control Valve
- Orifice - Power Steering Tube Seal
- O-ring - Locking Hub
- O-ring - Oil Cooler
- O-ring - Pressure Warning Switch
- O-ring - Suspension Air Spring Dryer Conn
- O-ring Solenoid
- Output Flange Ret Nut
- Output Shaft Bearing
- Output Shaft Seal
- Oxygen Sensor
- Pad - Brake and Clutch Pedal
- Panel Assembly Roof
- Parking Brake Cam Plate
- Parking Pawl
- Pawl Front/Rear Seat
- Pawl Latch
- Pawl Overdrive Shift
- PCM (Powertrain Control Module)
- PCV and Elbow Assembly
- PCV Tube
- Pedal Adjuster Assembly
- Pedal Assembly - Accelerator
- Pedal Assembly - Brake
- Pilot Assembly
- Pin - Differential Pinion Shaft
- Pin - Door Hinge
- Pin - Piston
- Pin - Planetary Gear
- Pin - Steering Column
- Pin Lock - Rear Spring Shackle
- Pin Plate
- Pinion - Diff Spider
- Pipe Brake Anti-lock
- Piston - Driveshaft Accumulator
- Piston - Low Servo
- Piston - Transmission Reverse
- Piston and Connecting Rod Assembly
- Piston Assembly - Brake Cylinder
- Piston Assembly - Transmission Reverse Clutch
- Piston Pin - Front Band
- Piston Ring
- Pivot - Front/Rear Seat Back
- Pivot Rear Seat Back
- Planetary Assembly - Transmission Rear
- Planetary Front
- Seal - Camshaft Thrust
- Plate - Coupling Shaft
- Seal - Differential Clutch
- Plate - Forward Clutch
- Plate - Gearshift Arm
- Plate - High Speed Clutch
- Plate - Oil Level
- Plate - Oil Pan Baffle
- Plate - Transmission
- Plate Assembly - Clutch Release
- Plate Assembly - Diff Gear Clutch
- Plate Assembly - Engine Rear
- Plate Assembly - Transmission Oil Pump
- Plate Front Spring Clip
- Plate Front/Rear Brake Back
- Plate Rear Spring Clip
- Plate Vacuum Pump Mounting
- Plenum EGR - Signal Con
- Plug - Oil Pan
- Plug Assembly Trailer Lamp
- Plunger - Interlock
- Plunger - Oil Pump Valve
- Plunger - Transmission Shift
- Plunger/Sleeve - Shifter
- Positive Crankcase Ventilation (PCV) Valve
- Potentiometer A/C
- Potentiometer Assembly
- Potentiometer Position Sensor
- Power Antenna
- Power Brake Booster Valve
- Power Brake Vacuum Motor
- Power Door Lock Actuator
- Power Door Locks and Retainer Clips
- Power Mirror Motor and Gears
- Power Regulator Rear Door
- Power Running Board Bracket
- Power Steering Fluid Reservoir
- Power Steering Hose
- Power Steering Module
- Power Steering Pressure Switch
- Power Steering Pump Assembly
- Power Steering Pump Seals
- Power Steering Pump Valve
- Pressure Relief Valve Cap
- Pressure Transducer
- Primary Sun Gear
- Processor Assembly
- Processor Assembly - Regulator On
- PTO Assembly
- Pulley - Alternator
- Pulley - Belt Idler
- Pulley - Water Pump
- Pulley and Bracket - Fan
- Pulley and Bracket Assembly - Fan
- Pulley Assembly - Belt Idler
- Oil Selector Main Control Valve
- Pump - Purge Valve
- Pulley Fan
- Pump - Front/Rear/Seat Pad Adjuster
- Pump - Windshield Washer
- Pump and Regulator Assembly
- Pump Assembly - Brake Vacuum
- Pump Assembly Ex Air Supply
- Purge Regulation Valve
- Race and Bushing Assembly
- Rack Assembly - Steering Gear
- Radiator Assembly
- Radiator Tank Inlet Assembly
- Rail Roof Sliding Panel
- Rear Anti-lock Braking Valve
- Rear Axle Bearing
- Rear Axle Seal
- Rear Brake Lever
- Rear Brake Shoe Pin
- Rear Crankshaft Seal
- Rear Disc Brake Seal
- Rear Hub Assembly
- Rear Leaf Spring Shackles
- Rear Spring Air Suspension
- Rear Stab Bar Axle Meeting
- Rear Stabilizer Bar
- Rear Tube Assembly - Brake Master
- Sender - Fuel Tank
- Sender - Oil Pressure
- Sender - Water Temp
- Sensor - ABS
- Sensor - Air Suspension Level
- Sensor - Air Temperature
- Sensor - Crank Timing
- Sensor - Front Suspension Level
- Sensor - Fuel Injector Pump
- Sensor - Low Coolant
- Sensor - Oil Temperature
- Sensor - Output Shaft
- Sensor - Parking Aid System
- Sensor - Rear Suspension Level
- Sensor - Shock Absorber
- Sensor - Skid Control
- Sensor - Sliding Door Actuator
- Shim A/C Compressor
- Skid Control Module Rear
- Sleeve - Bearing
- Sleeve - Front Stabilizer Bar
- Sleeve - Rear Stabilizer Bar
- Sleeve - Spacer Snap Ring
- Sleeve - Transmission Oil Pressure Boost
- Sleeve Assembly - Clutch Ad
- Sleeve Assembly - Rear Lube
- Sleeve/Ring Assembly Lockout
- Slide - Door Window Regulator
- Slinger - Front/Rear Hub Oil
- Slip Yoke Assembly - Front Axle
- Snap Ring - Countershaft
- Snap Ring - Synchronizer
- Snap Ring - Transmission
- SNS and Transmission Assembly - Tire Press
- Socket - Instrument Panel Light
- Socket and Wire - Rear Left
- Socket Assembly - Auxiliary Electric Power
- Solenoid - Engine Timing
- Solenoid - Engine Variable Timing
- Solenoid - Luggage Door
- Solenoid - Press Regulator
- Solenoid - Regulator
- Solenoid - Transmission
- Solenoid and Vacuum Modulator
- Solenoid and Manifold Actuator
- Solenoid Assembly - Fuel
- Solenoid Assembly - Trans
- Sonic Plenum EGR Valve
- Spacer - Front Spring
- Spacer - Power Steering
- Spacer - Rear Spring
- Spacer - Transmission
- Spare Wheel Carrier Lift Assembly
- Speaker - Assembly
- Speaker - Parking Aid Control
- Speedograph/Tachograph
- Speedometer Assembly
- Spindle - Nut and Bearing
- Spindle and Spindle Support Springs
- Spindle Assembly
- Spindle Nut Assembly
- Spring - Camshaft Plunger
- Spring - Differential Clutch
- Spring - Door Latch
- Spring - Front Suspension Torsion
- Spring - Gear Tensioner
- Spring - Leaf Rear
- Spring - Overrunning Clip
- Spring - Parking Pawl
- Spring - Rear Suspension Torsion
- Spring - Reverse Inhibitor
- Spring - Shift Bias
- Spring - Tran G/Shift Lever
- Spring Assembly - Front
- Spring Assembly - Rear
- Springs Slipper
- Sprocket - Crankshaft
- Sprocket - Lock Ring
- Start/Stop Push-Button Switch
- Starter Motor Assembly
- Starter Motor Solenoid
- Stationary Elevated Ride Control
- Steering Actuator Valve
- Separator Assembly - CC Vent
- Separator Assembly - Fuel Vapor
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential
- Shaft - Gear Shifter
- Shaft - Manual Control
- Shaft - Output
- Shaft - Power Steering Pump Rotor
- Shaft - Shift Accumulator
- Shaft - Steering To Column
- Shaft and Bearing - Water Pump
- Shaft and CV Joint Assembly
- Shaft and Rack
- Assembly Steering
- Shaft Assembly - Coupling
- Shaft Assembly - Front Axle
- Shaft Assembly - Rear Brake
- Shaft Assembly - Transmission Input
- Shaft Bushing
- Assembly - Outer
- Shell - Transmission
- Shield - Fender Splash
- Shield - Front/Rear Disc Brake
- Shield - Modulator Heat
- Shield - Parking Brake
- Shift Solenoid and Screen
- Shifter - Transmission Gear Shift Control
- Sensor - Speed Brake
- Sensor - Speedometer
- Sensor - Temp Coolant
- Sensor - Transmission Oil Temperature
- Sensor - Turbine Speed
- Sensor and Bracket Assembly Front/Rear
- Sensor Assembly - Camshaft
- Sensor Assembly - EGR Solenoid
- Sensor Assembly - Elect Control Cooler Temp
- Sensor Assembly - Engine Misfire Detector
- Sensor Assembly - Message Center
- Sensor Assembly - Rear Bracket
- Sensor Assembly - RR Bracket Anti-Lock
- Sensor Assembly - Tire Pressure
- Sensor Assembly - Yaw Control
- Separator Assembly - CC Vent
- Servo Assembly - Automatic Temperature Control
- Shockle Assembly Rear Spring
- Shaft - A/C Door
- Shaft - Actuating Level
- Shaft - Brake Pedal
- Shaft - Differential



# Premium/Extra Maintenance Plan

# Diesel EngineCARE

Covers 13 Critical Powertrain Components

# 13

# PowertrainCARE

Covers 29 Critical Powertrain Components

# 29

# BaseCARE

Covers 84 Major Components

# 84

# ExtraCARE

Covers 113 Components

# 113

# PremiumCARE

Covers more than 1,000 Components (Partial List)

# 1000+

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorbers/Struts
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Exhaust (Manifold and Bolts)
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case (Including All Internal Parts)
- Turbocharger/Supercharger Unit (Factory-Installed)

- All Internally Lubricated Parts (Engine)
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Field Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- All Internally Lubricated Parts (Transmission)
- Alternator
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Ball Joints – Upper and Lower (Front Suspension)
- Brake Booster (Power)
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Lower)
- Control Arms (Upper)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Diesel Injector Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Electronic Ignition Module
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt
- Heated Backglass (Electrical Only – Not Glass Damage or Breakage)
- Idler Arm
- Ignition Switch
- Intake (Manifold and Bolts)

- Linkage and Bushings (Front & Rear Suspension)
- Locking Rings (Four-Wheel Drive)
- MacPherson Style Struts (Front)
- Master Cylinder
- Metal Lines and Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Cables
- Parking Brake Linkages
- Power Steering Pump/Electric Power Steering Actuator
- Pulley Assembly (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Drive Axles)
- Seals and Gaskets (Steering)
- Seals and Gaskets (Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front Suspension)
- Springs (Brakes)
- Stabilizer Bar (Front Suspension)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Tie Rods (Front Suspension)
- Tie Rods (Rear Suspension)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axles)
- Valve Covers
- Viscous Coupler/Flexible Coupler
- Voltage Regulators
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Radiator
- Radiator Fan (Clutch or Motor)
- Radiator Fan Relay
- Seals & Gaskets (Engine)
- Seals & Gaskets (Transmission)
- Exhaust (Manifold and Bolts)

- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas Fuel Injectors
- Gas Injector Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Control Assembly
- Heater Core Assembly
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Intake (Manifold and Bolts)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages & Couplings (Steering)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Viscous Coupler/Flexible Coupler
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiring Harnesses (Excluding Spark Plug Wires)
- Engine Mounts
- Exhaust (Manifold and Bolts)

- Seals & Gaskets (Front- and Rear-Wheel-Drive Axles)
- Seals & Gaskets (Steering)
- SecuriCode™ Keyless Entry
- Self Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speed Control
- Speedometer/Odometer (Electrical and Mechanical)
- Spindle & Spindle Supports
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Radiator
- Radiator Fan (Clutch or Motor)
- Radiator Fan Relay
- Seals & Gaskets (Engine)
- Seals & Gaskets (Transmission)
- Exhaust (Manifold and Bolts)

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Assembly - Steering Column
- Actuator Module - Safety Restraint
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Radiator
- Radiator Fan (Clutch or Motor)
- Radiator Fan Relay
- Seals & Gaskets (Engine)
- Seals & Gaskets (Transmission)
- Exhaust (Manifold and Bolts)

- Air Idle Vacuum Valve
- Air Intake Ducting
- Air Pump Muffler
- Air Reservoir Tank
- Assembly
- Air Spring Solenoid
- Air Suspension Compressor
- Assembly
- Air Suspension Dryer
- Assembly
- Air Suspension Lines
- Air Suspension Quick Connect
- Alternator
- Alternator Assembly
- Alternator Rotor
- AM/FM Receiver
- Ambient Sensor
- Ammeter - Alternator
- Amplifier Assembly
- Amplifier Assembly EGR Valve
- Anchor Push Rod
- Antenna Remote Control
- Anti-Lock Brake Sensor
- Anti-Slosh Module
- Anti-Skid Brake Relay
- Anti-Theft Alarm - Factory-Installed
- Arm - Steering Pitman
- Arm and Bushing Assembly - Front Suspension
- Arm and Bushing Assembly - Rear Suspension
- Arm and Pivot Shaft Assembly - Windshield Wiper
- Arm Assembly - Selector
- Arm Assembly - Windshield Wiper Motor
- Armature Sensor Motor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve

- Axle Assembly - Clutch
- Axle Assembly - Rear
- Axle Shaft Assembly
- Back-Up Siren/Alarm
- Baffle - Input Shaft
- Baffle - Output Shaft
- Balance Shaft Assembly
- Ball Joint Assembly - Upper/Lower
- Ballast - Hi Mount Stop Lamp
- Band - Front
- Band - Rear
- Band - Transmission Reverse
- Band Assembly - Transmission Intermediate
- Barometric and Map Sensor
- Barometric Pressure Sensor
- Bearing - Coupling Shaft
- Bearing - Differential Adjuster
- Bearing - Front Axle
- Bearing - Parking Brake
- Bearing - Reverse Idler
- Bearing - Worm Gear
- Bearing Assembly - A/C Comp Clutch
- Bearing Assembly - Air Compressor
- Bearing Assembly - Elect Shift
- Bearing Assembly - Rear Wheel
- Bearing Assembly - Spindle
- Bearing Cup Front Wheel
- Bearing Front Wheel
- Bearing Seal Front Suspension
- Bearings - All Internally Lubricated
- Belt Assembly Center Pass
- Blind Spot Sensor
- Blind Spot Sensor Bracket
- Block Assembly - Electrical Wiring
- Block Fuel Tube Support
- Blower Motor Assembly
- Blower Motor Resistor
- Body Assembly - Brake Booster
- Bolt - Gear Shift Housing

- Bolt Differential Gear Case
- Boost Pressure Switch
- Booster Assembly - Power Brake
- Boot - Brake Cylinder Front/Rear
- Boot - Driveshaft Joint
- Boot - Gearshift Control
- Boot - Rear Axle CV Joint
- Boot - Steering Column
- Boot Courtesy Lamp
- Switch
- Brace - Engine to Transmission
- Bracket A/C Comp Mounting
- Bracket A/C Condenser Mt
- Bracket A/C Hose
- Bracket Assembly - Front Shock
- Bracket Assembly - Front/Rear Seat Side Armrest Mounting
- Bracket Assembly - Rear Shock
- Bracket for Radius Arm
- Bracket Rear Door Glass
- Bracket Stabilizer Bar Link
- Brake Adjuster Screw
- Brake Adjuster Spring
- Brake and Clutch M/C Bushing
- Brake Booster Control Seal
- Brake Caliper Support
- Brake Line - Metal
- Brake Master Cylinder Assembly
- Brake Master Cylinder Gasket
- Brake Master Cylinder Seal
- Brake Master Cylinder Switch
- Brake Pressure Accumulator
- Brake Shoe Adjuster Nut
- Brake Shoe Anchor Pin
- Brake Shoe Hold Cup
- Brake Shoe Hold Spring
- Brake Vacuum Booster Seal
- Brake Wiring Assembly
- Brush and Spring - Alternator

- Cap Assembly - Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/ Handsset/ Speaker
- Chain Timing
- Chassis Radio
- Child Safety Belt
- Cigar Lighter Assembly
- Clamp - Transmission Gear Shift Lever
- Clip - Brake Shoe Locator
- Clock Assembly
- Clutch and Pulley - Air Conditioner
- Clutch Assembly - Direct One-Way
- Clutch Assembly - Planetary
- Clutch Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Cover - Reverse Band Servo
- Cover - Transmission Control Indicator
- Cover Assembly - Flywheel
- Cover Assembly - Rear Engine
- Cover Assembly - Valve Push Rod
- Cover Front/Rear Seat Track
- Cover Rear Seat Support
- Cover Transducer Mounting
- Crankcase Vent Tube
- Crankshaft Assembly
- Crankshaft Bearings
- Cup Wheel Bearing
- CV Joint Assembly - Inboard
- CV Joint Assembly - Outboard
- Control Assembly - Valve Body
- Control Head - Rear
- Control Module - Air Suspension
- Control Module - Heated Windshield
- Control Unit - Anti-Lock
- Control Valve Seals
- Controls - Rear Seat
- Coolant Pump
- Coolant Temp Switch
- Coolant Tube
- Coolant Tube Assembly - Inlet
- Coolant Tube Assembly - Outlet
- Cooler - Crankcase Oil
- Cooler - EGR Oil
- Cooler - Transmission Oil
- Cooler Assembly - Power Steering Oil
- Cooler Assembly EGR Recirculation
- Core - Air Conditioner Evaporator
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Damper Front Spring
- Damper Rear Spring
- Detent - Transmission Control
- Diaphragm Assembly - TV Connector
- Diesel Fuel Injectors
- Diesel Fuel Injector
- Diesel Lift Pump
- Differential Assembly - Rear
- Differential Case Gear Support
- Differential Locking Mechanism
- Differential Side Gears
- Diode Assembly
- Direct Clutch Cylinder
- Disc - Differential Clutch
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
- Bushing - Front Suspension Upper
- Bushing - Front/Rear Seat Adjuster
- Bushing - Front/Rear Seat Track
- Bushing - Rear Lower Arm
- Bushing - Rear Suspension
- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster Actuator
- Cable Assembly - Brake Shoe Adjuster
- Cable Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer Readout Displays
- Compass Assembly
- Core Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder
- Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump

- Exhaust Control Assembly
- Extension Housing
- Assembly - Transmission
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Field Assembly - A/C
- Filter - Power Steering Pump
- Filter Housing
- Flange - Steering Column Tube
- Flange - U-Joint
- Flange - Universal Joint Axle
- Flange Universal Joint Spine
- Disc and Hub Assembly A/C
- Electric Clock Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Emissions Air Pump
- Muffler Shield
- Engine Control Module
- Engine Front Support Mount
- Engine Oil Cooler
- Engine Torque Strut/Mount
- Equalizer - Parking Brake

- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear
- Drum Suspension
- Drum Suspension - Upper/Lower
- Drum Suspension - Lower Arm
- Bushing - Front Suspension
- Bushing - Front Suspension Lower Arm
<